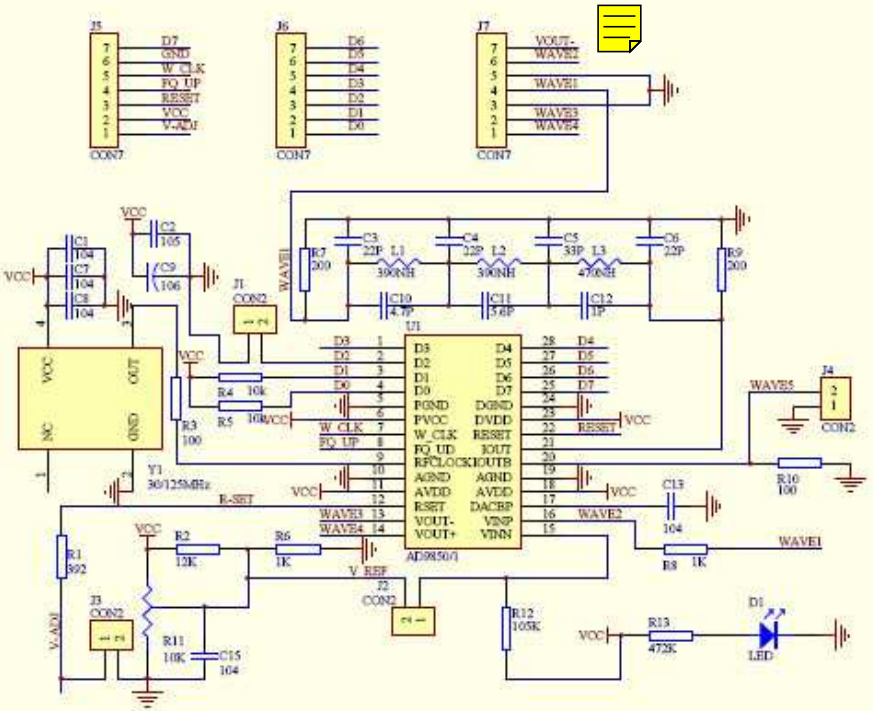

J5, J6, J7

Set aside Interface

J1

Unconnect: Parallel Mode

Connect: Serial Mode

J2

Connect: Quare Wave Enable

Unconnect: Quare Wave Disable, Adjustment R11 For Duty Cycle

J4

Square Wave 2

J3

Unconnect: Connection Extarn Potentiometer or J5, Adjust Voltage

Connect: From R1 Get Current

Title		
Size: B	Number	Revision
Date: 23-Nov-2010	Sheet of	
File: H:\[AD]\[AD-DDS]\[DDS-AD9850]\AD9850_1_V4\AD9850_1_V4.SCH		